



Bar 2.1

2-Channel Soundbar with Wireless Subwoofer

Quick Start Guide

1. What's in the box

- 1 Soundbar
- 1 Subwoofer
- 1 Remote Control
- 1 Wall mount kit
- 1 Optical Cable
- 1 AUX cable
- 1 Power Cord
- 1 HDMI Cable
- 1 Wall Mount Brackets
- 1 Product Information & Wall-mount Kit

2. Place your soundbar

2a. Place the Soundbar on the table

2b. Wall mount the SoundBar

Use the provided screws to install the wall-mount brackets on the wall, then a pin through the center mark the wall-mount bracket template and remove the paper.

3. Connect to your TV

3a. Connect to other devices

3b. Connect to your TV

3c. Connect to other devices

3d. Wall mount the Soundbar

Screw the wall mount brackets on the pen mark. Fix the screw at the back of soundbar; then hook the soundbar on the wall.

4. Power your system

4a. Power your system

4b. Power your system

4c. Power your system

5. Control your soundbar

5a. Top Panel

5b. Remote control

5c. Remote control

6. Bluetooth® connection

6a. Press Remote Control Bluetooth button to enter Bluetooth mode

6b. Press Remote Control Bluetooth button to enter Bluetooth mode

6c. Press Remote Control Bluetooth button to enter Bluetooth mode

7. JBL SoundShiR™

7a. JBL SoundShiR™

7b. JBL SoundShiR™

7c. JBL SoundShiR™

8. Respond to your TV Remote control

8a. Respond to your TV Remote control

8b. Respond to your TV Remote control

8c. Respond to your TV Remote control

9. Product Specifications

Total Maximum Power 300W
 Soundbar Maximum Power 100W
 Subwoofer Maximum Power 200W
 Soundbar Transducer Size 6 x 2.25" tweeter

Frequency Response 40Hz to 20kHz
 Operating Temperature 0°C to 40°C

HDMI Video Output 1
 HDMI Video Output (S/PDIF Audio Return Channel) 1
 HDMI HDCP Version 1.4

Bluetooth Version 4.2 (A2DP/L2P/AVCP/LE)
 Bluetooth Frequency Range 2402MHz-2483MHz
 Max Transmitting Power 5.0W Wireless Frequency Range 5.8G Wireless Frequency Range 2334MHz (EPP)

Soundbar Dimensions W x H x D 965 x 58 x 69mm | 38" x 2.3" x 2.7"
 Soundbar Weight 1.9kg
 Subwoofer Dimensions W x H x D 225 x 370 x 229mm | 8.9" x 14.6" x 9.0"
 Subwoofer Weight 5.2kg
 Packaging Dimensions W x H x D 1038 x 280 x 398mm | 40.9" x 11" x 14.5"
 Packaging Weight 10.0kg

FR - Guide de démarrage rapide

ES - Guía de inicio rápido

PT - Guia de Início Rápido

DE - Kurzanleitung

IT - Guida di avvio rapido

NL - Snelstartgids

NO - Hurtigstartveiledning

FI - Käyttöohje

RU - Краткое руководство

SV - S snabbstartsguide

DA - Hurtigstartguide

JP - クイックスタートガイド

PL - Przewodnik szybkiego startu

KO - 빠른시작가이드

CHS - 快速入门指南

CHT - 快速入門指南

ID - Panduan Memulai Cepat

AR - دليل التثبيت السريع

1. What's in the box

1 Soundbar
 1 Subwoofer
 1 Remote Control
 1 Wall mount kit
 1 Optical Cable
 1 AUX cable
 1 Power Cord
 1 HDMI Cable
 1 Wall Mount Brackets
 1 Product Information & Wall-mount Kit

2. Place your soundbar

2a. Place the Soundbar on the table

2b. Wall mount the SoundBar

Use the provided screws to install the wall-mount brackets on the wall, then a pin through the center mark the wall-mount bracket template and remove the paper.

3. Connect to your TV

3a. Connect to other devices

3b. Connect to your TV

3c. Connect to other devices

3d. Wall mount the Soundbar

Screw the wall mount brackets on the pen mark. Fix the screw at the back of soundbar; then hook the soundbar on the wall.

4. Power your system

4a. Power your system

4b. Power your system

4c. Power your system

5. Control your soundbar

5a. Top Panel

5b. Remote control

5c. Remote control

6. Bluetooth® connection

6a. Press Remote Control Bluetooth button to enter Bluetooth mode

6b. Press Remote Control Bluetooth button to enter Bluetooth mode

6c. Press Remote Control Bluetooth button to enter Bluetooth mode

7. JBL SoundShiR™

7a. JBL SoundShiR™

7b. JBL SoundShiR™

7c. JBL SoundShiR™

8. Respond to your TV Remote control

8a. Respond to your TV Remote control

8b. Respond to your TV Remote control

8c. Respond to your TV Remote control

9. Product Specifications

Total Maximum Power 300W
 Soundbar Maximum Power 100W
 Subwoofer Maximum Power 200W
 Soundbar Transducer Size 6 x 2.25" tweeter

Frequency Response 40Hz to 20kHz
 Operating Temperature 0°C to 40°C

HDMI Video Output 1
 HDMI Video Output (S/PDIF Audio Return Channel) 1
 HDMI HDCP Version 1.4

Bluetooth Version 4.2 (A2DP/L2P/AVCP/LE)
 Bluetooth Frequency Range 2402MHz-2483MHz
 Max Transmitting Power 5.0W Wireless Frequency Range 5.8G Wireless Frequency Range 2334MHz (EPP)

Soundbar Dimensions W x H x D 965 x 58 x 69mm | 38" x 2.3" x 2.7"
 Soundbar Weight 1.9kg
 Subwoofer Dimensions W x H x D 225 x 370 x 229mm | 8.9" x 14.6" x 9.0"
 Subwoofer Weight 5.2kg
 Packaging Dimensions W x H x D 1038 x 280 x 398mm | 40.9" x 11" x 14.5"
 Packaging Weight 10.0kg

FR - Guide de démarrage rapide

ES - Guía de inicio rápido

PT - Guia de Início Rápido

DE - Kurzanleitung

IT - Guida di avvio rapido

1. What's in the box

1 Soundbar
 1 Subwoofer
 1 Remote Control
 1 Wall mount kit
 1 Optical Cable
 1 AUX cable
 1 Power Cord
 1 HDMI Cable
 1 Wall Mount Brackets
 1 Product Information & Wall-mount Kit

2. Place your soundbar

2a. Place the Soundbar on the table

2b. Wall mount the SoundBar

Use the provided screws to install the wall-mount brackets on the wall, then a pin through the center mark the wall-mount bracket template and remove the paper.

3. Connect to your TV

3a. Connect to other devices

3b. Connect to your TV

3c. Connect to other devices

3d. Wall mount the Soundbar

Screw the wall mount brackets on the pen mark. Fix the screw at the back of soundbar; then hook the soundbar on the wall.

4. Power your system

4a. Power your system

4b. Power your system

4c. Power your system

5. Control your soundbar

5a. Top Panel

5b. Remote control

5c. Remote control

6. Bluetooth® connection

6a. Press Remote Control Bluetooth button to enter Bluetooth mode

6b. Press Remote Control Bluetooth button to enter Bluetooth mode

6c. Press Remote Control Bluetooth button to enter Bluetooth mode

7. JBL SoundShiR™

7a. JBL SoundShiR™

7b. JBL SoundShiR™

7c. JBL SoundShiR™

8. Respond to your TV Remote control

8a. Respond to your TV Remote control

8b. Respond to your TV Remote control

8c. Respond to your TV Remote control

9. Product Specifications

Total Maximum Power 300W
 Soundbar Maximum Power 100W
 Subwoofer Maximum Power 200W
 Soundbar Transducer Size 6 x 2.25" tweeter

Frequency Response 40Hz to 20kHz
 Operating Temperature 0°C to 40°C

HDMI Video Output 1
 HDMI Video Output (S/PDIF Audio Return Channel) 1
 HDMI HDCP Version 1.4

Bluetooth Version 4.2 (A2DP/L2P/AVCP/LE)
 Bluetooth Frequency Range 2402MHz-2483MHz
 Max Transmitting Power 5.0W Wireless Frequency Range 5.8G Wireless Frequency Range 2334MHz (EPP)

Soundbar Dimensions W x H x D 965 x 58 x 69mm | 38" x 2.3" x 2.7"
 Soundbar Weight 1.9kg
 Subwoofer Dimensions W x H x D 225 x 370 x 229mm | 8.9" x 14.6" x 9.0"
 Subwoofer Weight 5.2kg
 Packaging Dimensions W x H x D 1038 x 280 x 398mm | 40.9" x 11" x 14.5"
 Packaging Weight 10.0kg